



Template for 2 3/4", 3 3/4" and 5" Backsets 9KOM2000 Cylindrical Locks

Drill 1" hole for all latches.

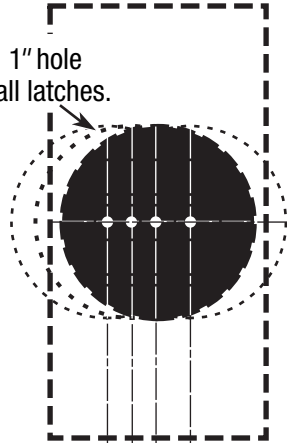

Find latch hole by door thickness

1 3/8"
1 3/4"
2"
2 1/4"

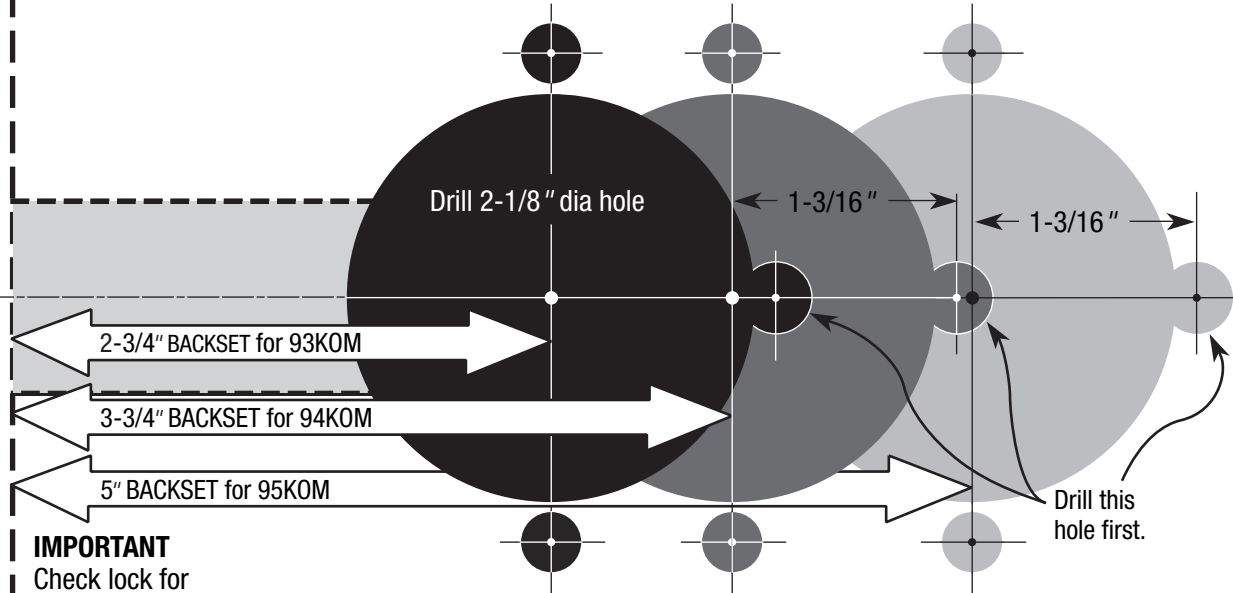

2-3/4" BACKSET for 93KOM

3-3/4" BACKSET for 94KOM

5" BACKSET for 95KOM

Drill 2-1/8" dia hole

1-3/16"

1-3/16"

Drill this hole first.

IMPORTANT

Check lock for proper backset before drilling.

Fold along the dotted line and place on high edge of door bevel.

STANLEY

OMNILOCK[®]

T83310/Rev A ER-7991-7 June 2009