


HOLE TABLE			
SCREW	SYMBOL	DESCRIPTION	PAGE
	A	13/32" DIA. x 1-9/16" DEEP 15/32" DIA. C'DRILL x 1/4" DEEP	2
	B	1-7/8" DIA. x 13/16" DEEP	2
1/4-20 X 7/8 PHMS	C	5/16" DIA.	1
	D	1/2" DIA	1
1/4-20 X 7/8 PHMS	E	FOR LHR DOOR: DRILL #7 (.201" DIA), TAP 1/4-20	1
1/4-20 X 7/8 PHMS	F	FOR RHR DOOR: DRILL #7 (.201" DIA), TAP 1/4-20	1

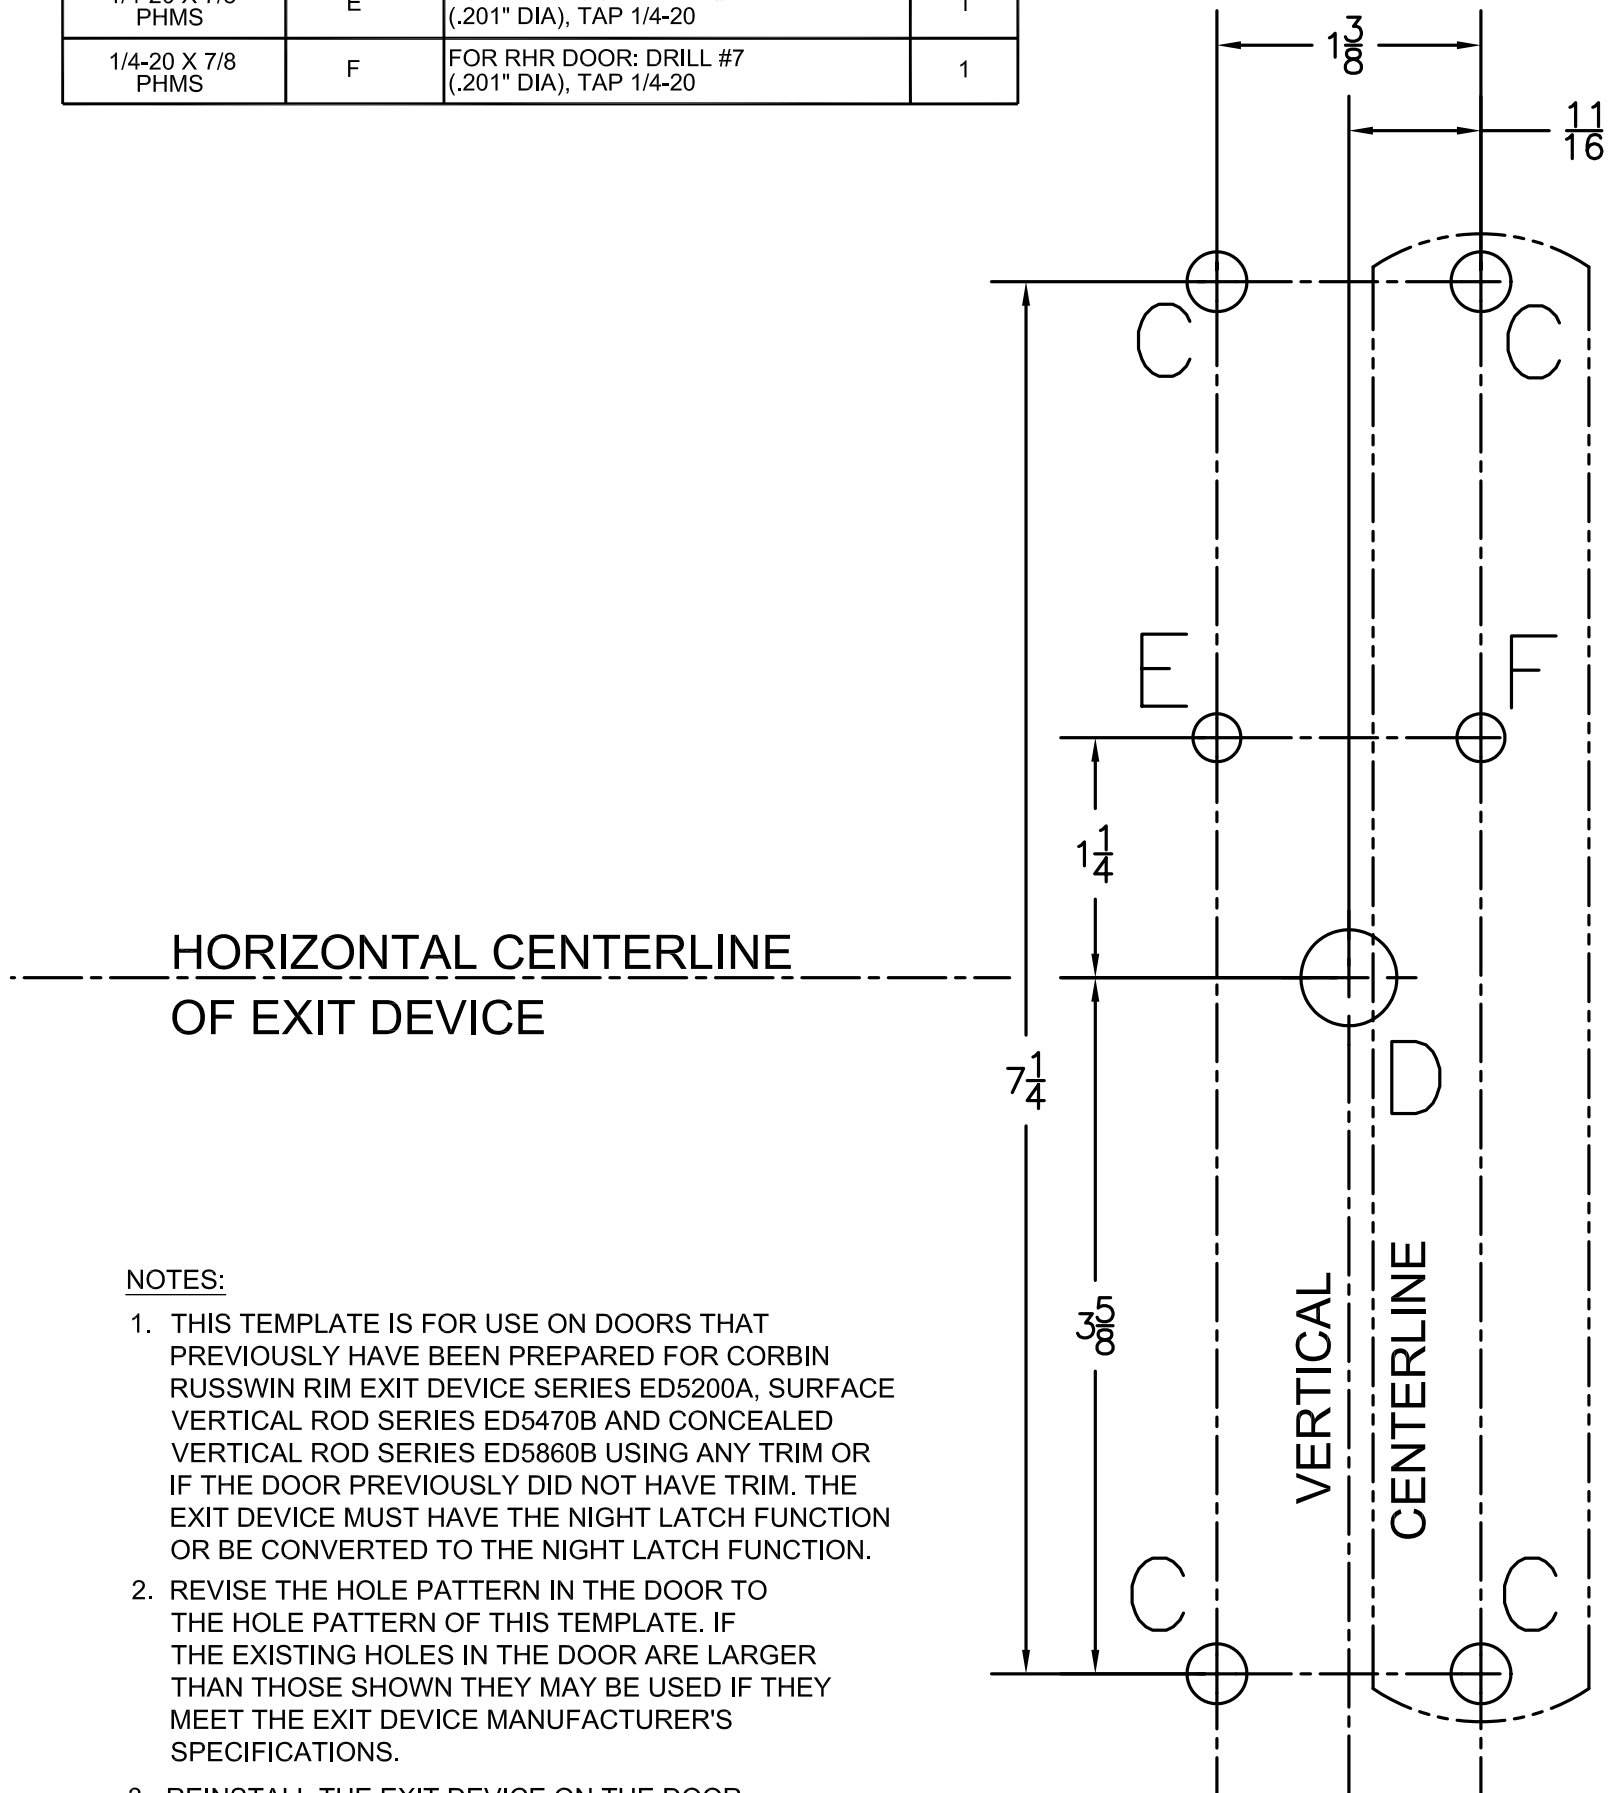


HORIZONTAL CENTERLINE  
OF EXIT DEVICE

VERTICAL  
CENTERLINE

INSIDE DOOR PREP  
(RHR DOOR SHOWN)

**NOTES:**

1. THIS TEMPLATE IS FOR USE ON DOORS THAT PREVIOUSLY HAVE BEEN PREPARED FOR CORBIN RUSSWIN RIM EXIT DEVICE SERIES ED5200A, SURFACE VERTICAL ROD SERIES ED5470B AND CONCEALED VERTICAL ROD SERIES ED5860B USING ANY TRIM OR IF THE DOOR PREVIOUSLY DID NOT HAVE TRIM. THE EXIT DEVICE MUST HAVE THE NIGHT LATCH FUNCTION OR BE CONVERTED TO THE NIGHT LATCH FUNCTION.
2. REVISE THE HOLE PATTERN IN THE DOOR TO THE HOLE PATTERN OF THIS TEMPLATE. IF THE EXISTING HOLES IN THE DOOR ARE LARGER THAN THOSE SHOWN THEY MAY BE USED IF THEY MEET THE EXIT DEVICE MANUFACTURER'S SPECIFICATIONS.
3. REINSTALL THE EXIT DEVICE ON THE DOOR USING HOLE "E" AND "F" AS APPLICABLE AND REINSTALL THE MOUNTING BRACKET/END CAP USING THE ORIGINAL HARDWARE.
4. IF YOU ARE REPLACING CORBIN RUSSWIN TRIM STYLE T13, INSTALL THE SPECIAL SNB (SEX BOLT), FINISH WASHER AND #10-24 X 7/8 INCH LONG OVAL HEAD SCREW TO FILL THE LOWER HANDLE HOLE.
5. REFER TO THE OMNILOCK QUICK ADAPTER EXIT TRIM INSTALLATION INSTRUCTION TO INSTALL THE OMNILOCK QUICK ADAPTER AND THE EXIT DEVICE ON THE DOOR.

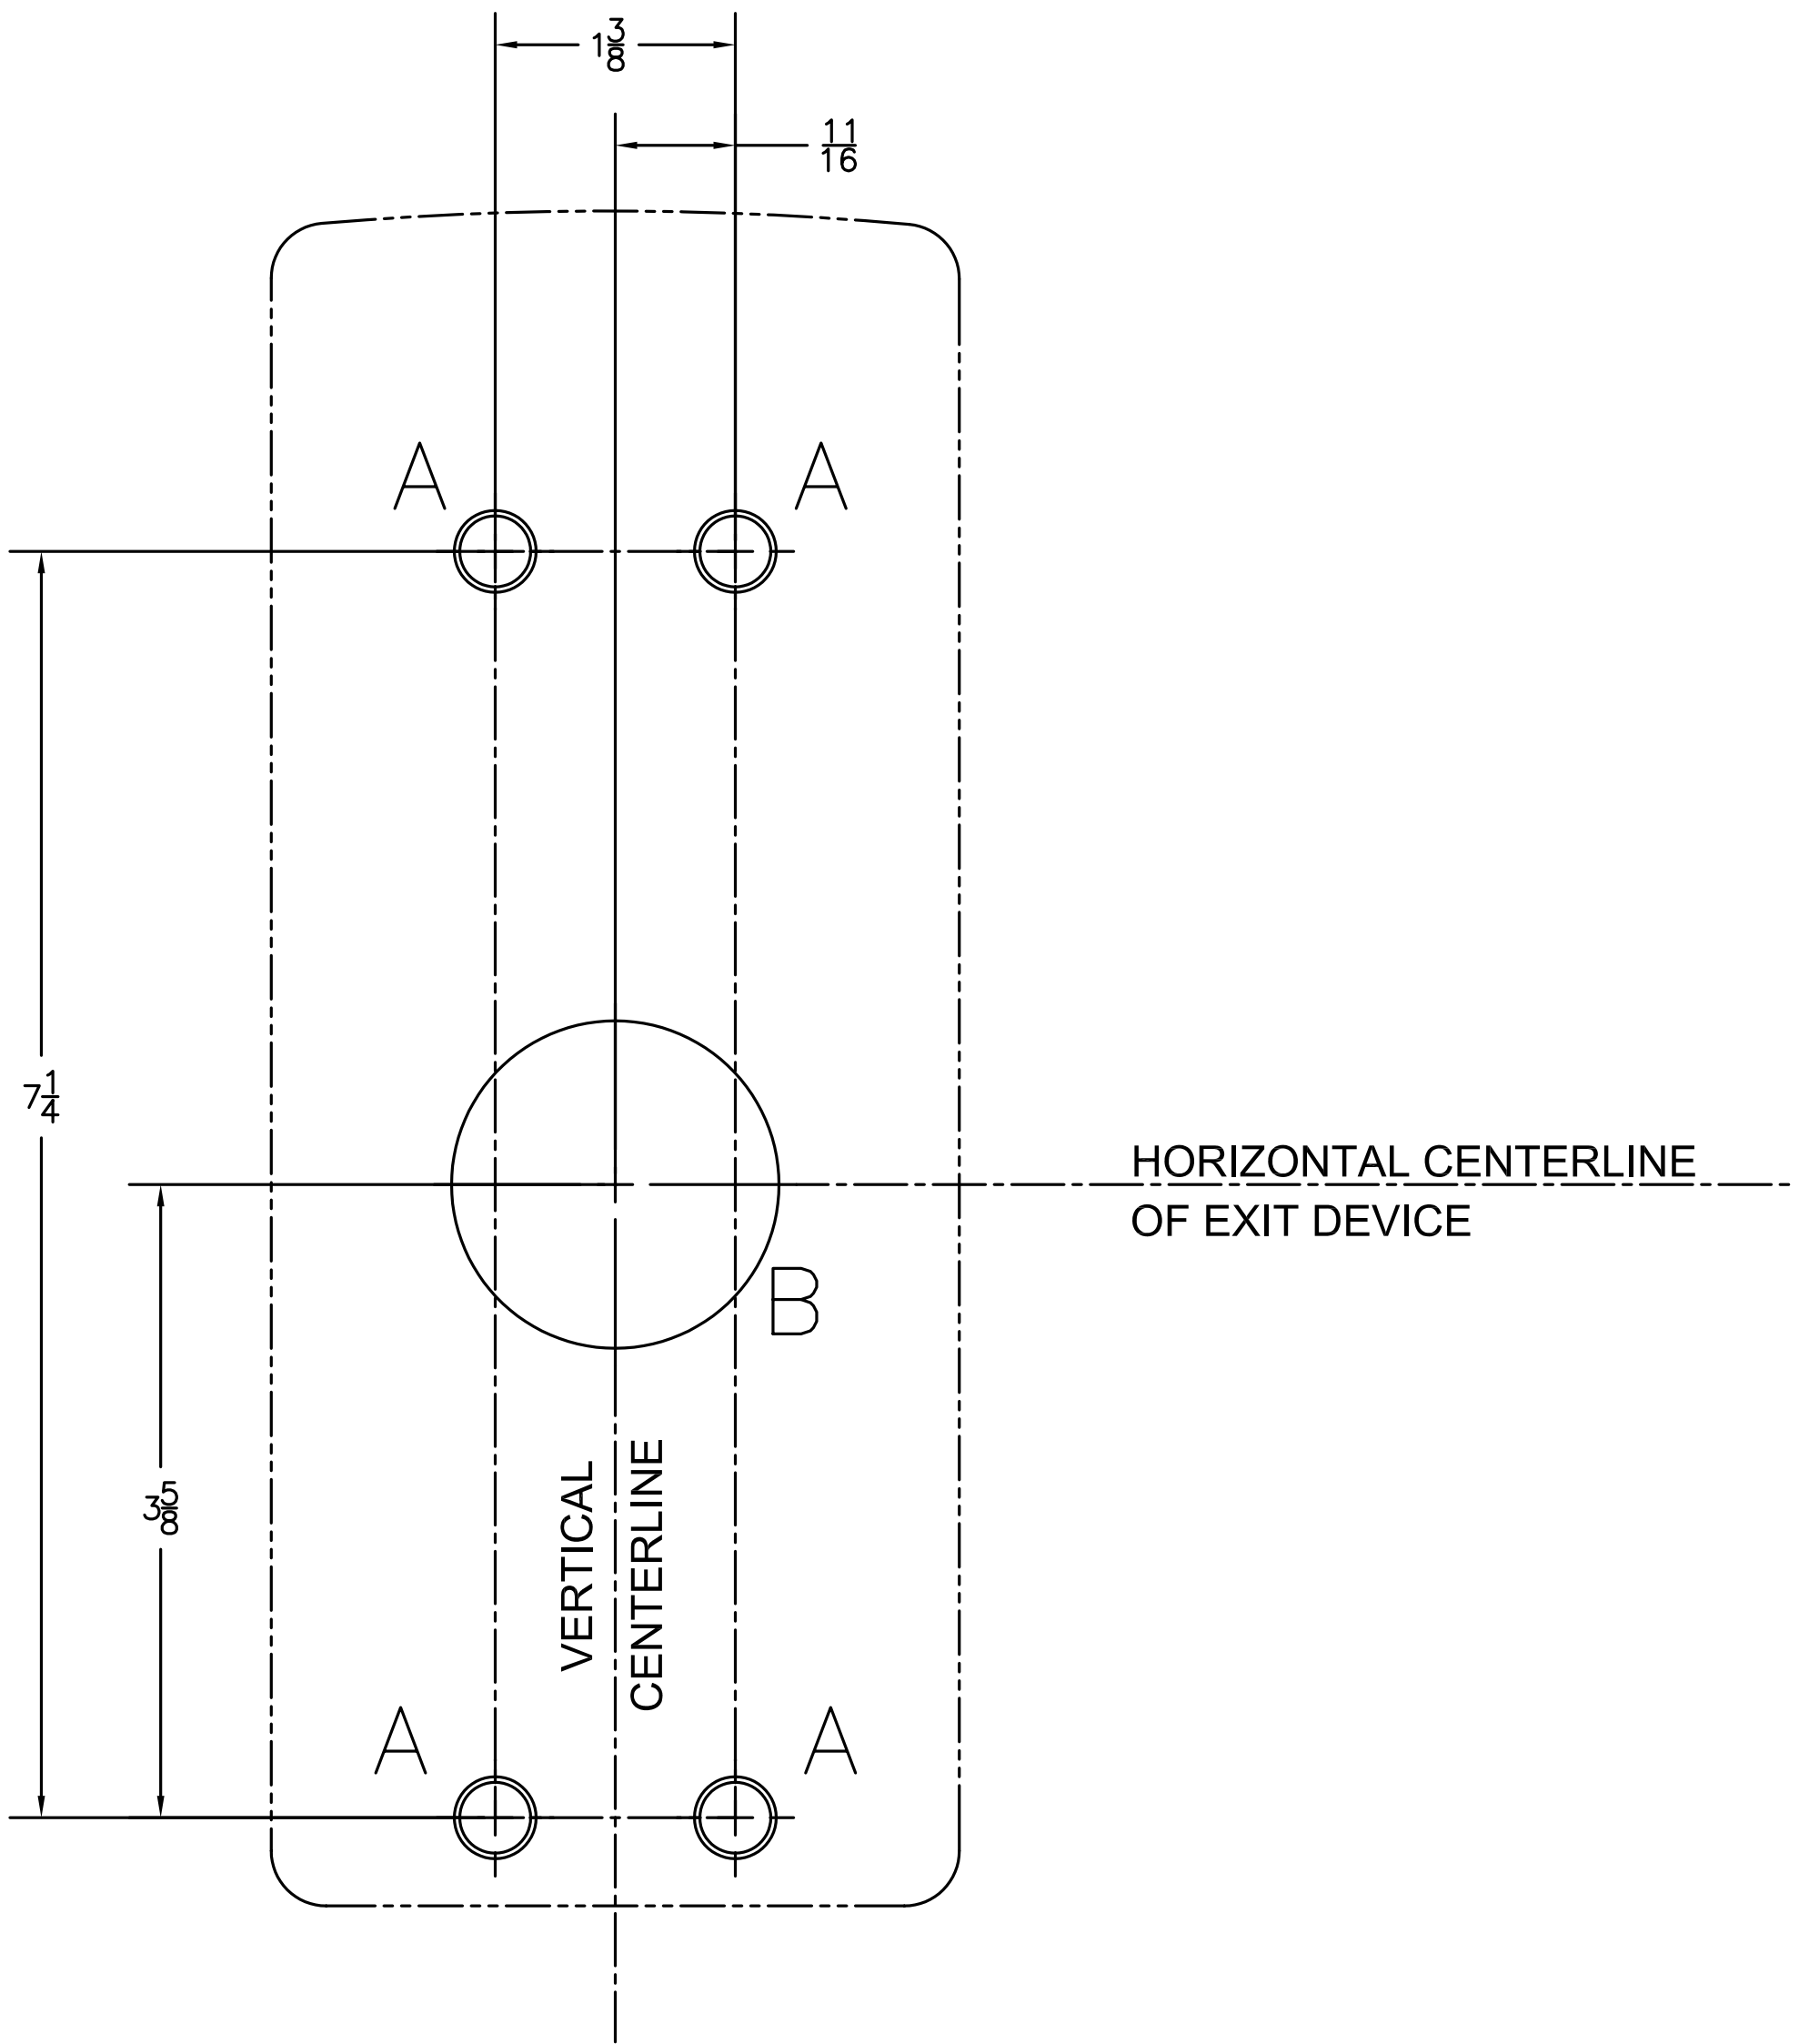

**OUTSIDE DOOR PREP**