HOLE TABLE			
SCREW	SYMBOL	DESCRIPTION	PAGE
	A	15/32" DIA. 1-9/16" DEEP	2
	B	1-7/8" DIA. x 13/16" DEEP	2
#10-24 X 3/4" FHMS	C	1/4-20 NC TAPPED HOLE.	1
	D	1/2" DIA	1
1/4-20 X 5/8" FHMS	E	1/4-20 NC TAPPED HOLE (LHRB DOOR)	1
	F	1/4-20 NC TAPPED HOLE (RHRB DOOR)	1
1/4-20 X 1-1/8" FHMS	G	3/8" DIA.	1

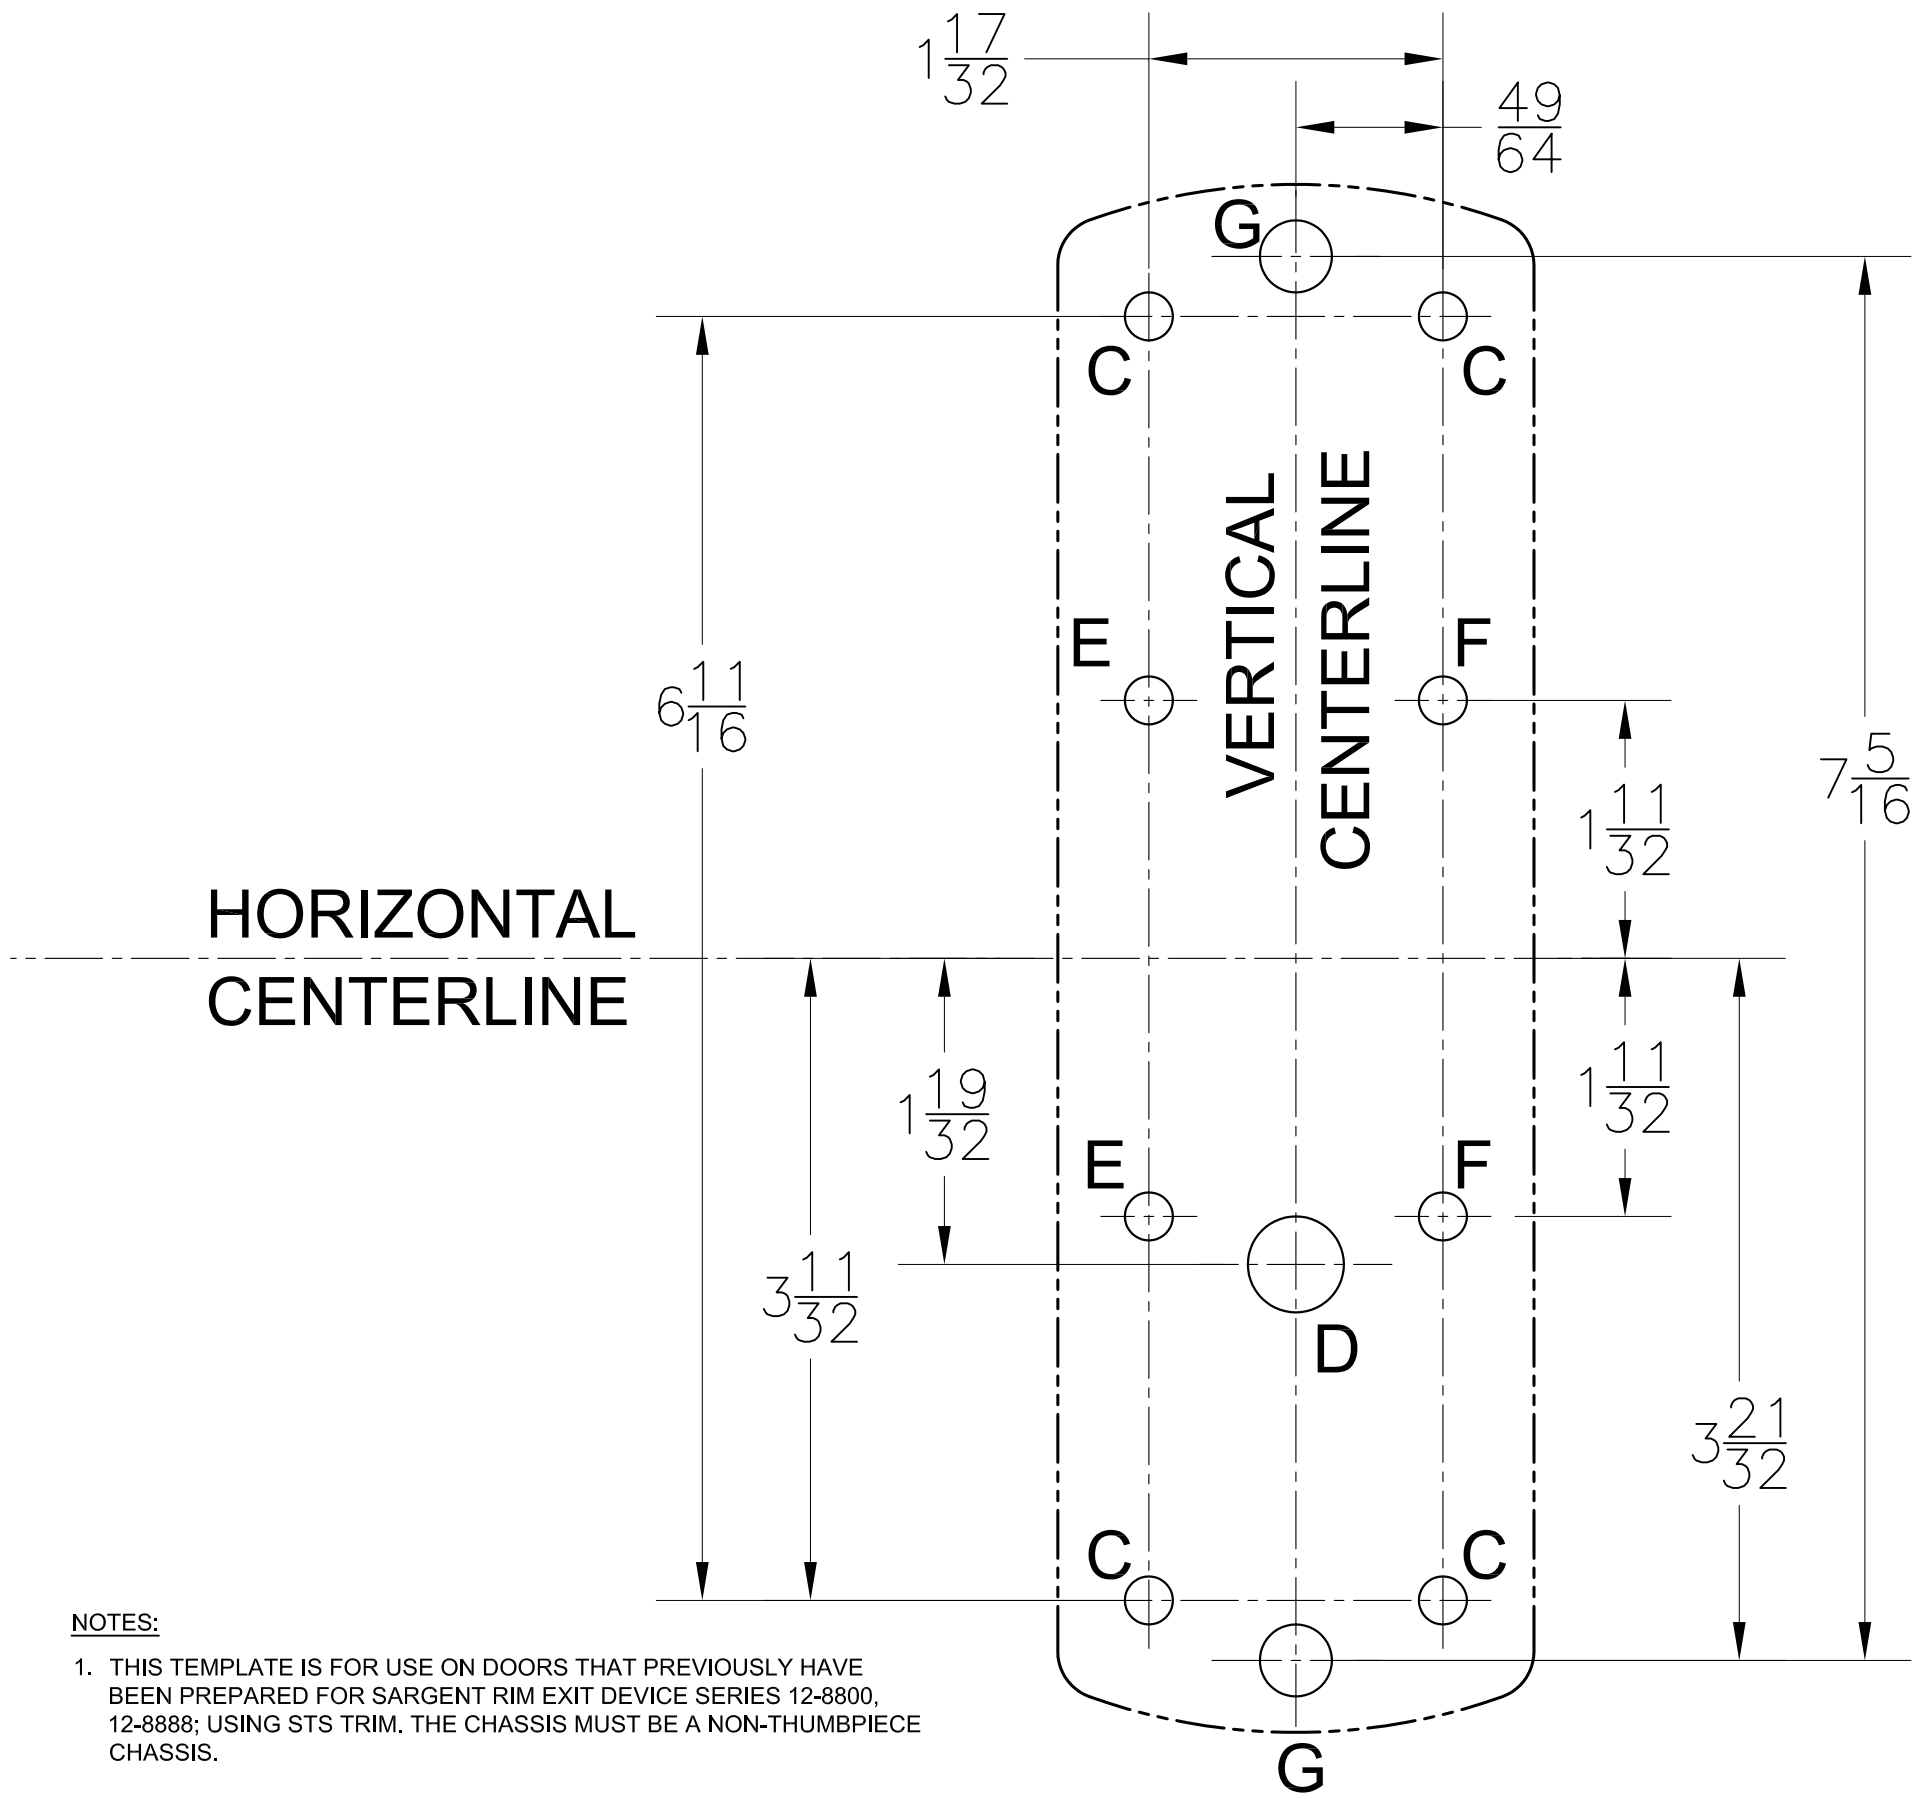

NOTES:

1. THIS TEMPLATE IS FOR USE ON DOORS THAT PREVIOUSLY HAVE BEEN PREPARED FOR SARGENT RIM EXIT DEVICE SERIES 12-8800, 12-8888; USING STS TRIM. THE CHASSIS MUST BE A NON-THUMBPIECE CHASSIS.

2. REMOVE THE CHASSIS COVER AND TRIM FROM THE DOOR. REVISE THE HOLE PATTERN ON THE OUTSIDE OF THE DOOR TO THE HOLE PATTERN ON PAGE 2 OF THIS TEMPLATE.

3. PLUG THE UNUSED STS TRIM LOWER MOUNTING HOLE. OSI HOLE PLUG KIT 12078-005 IS AVAILABLE FOR THIS PURPOSE.

4. REFER TO THE OMNILOCK QUICK ADAPTER EXIT DEVICE TRIM INSTALLATION INSTRUCTION TO INSTALL THE OMNILOCK TRIM AND COMPLETE THE INSTALLATION.

INSIDE DOOR PREP

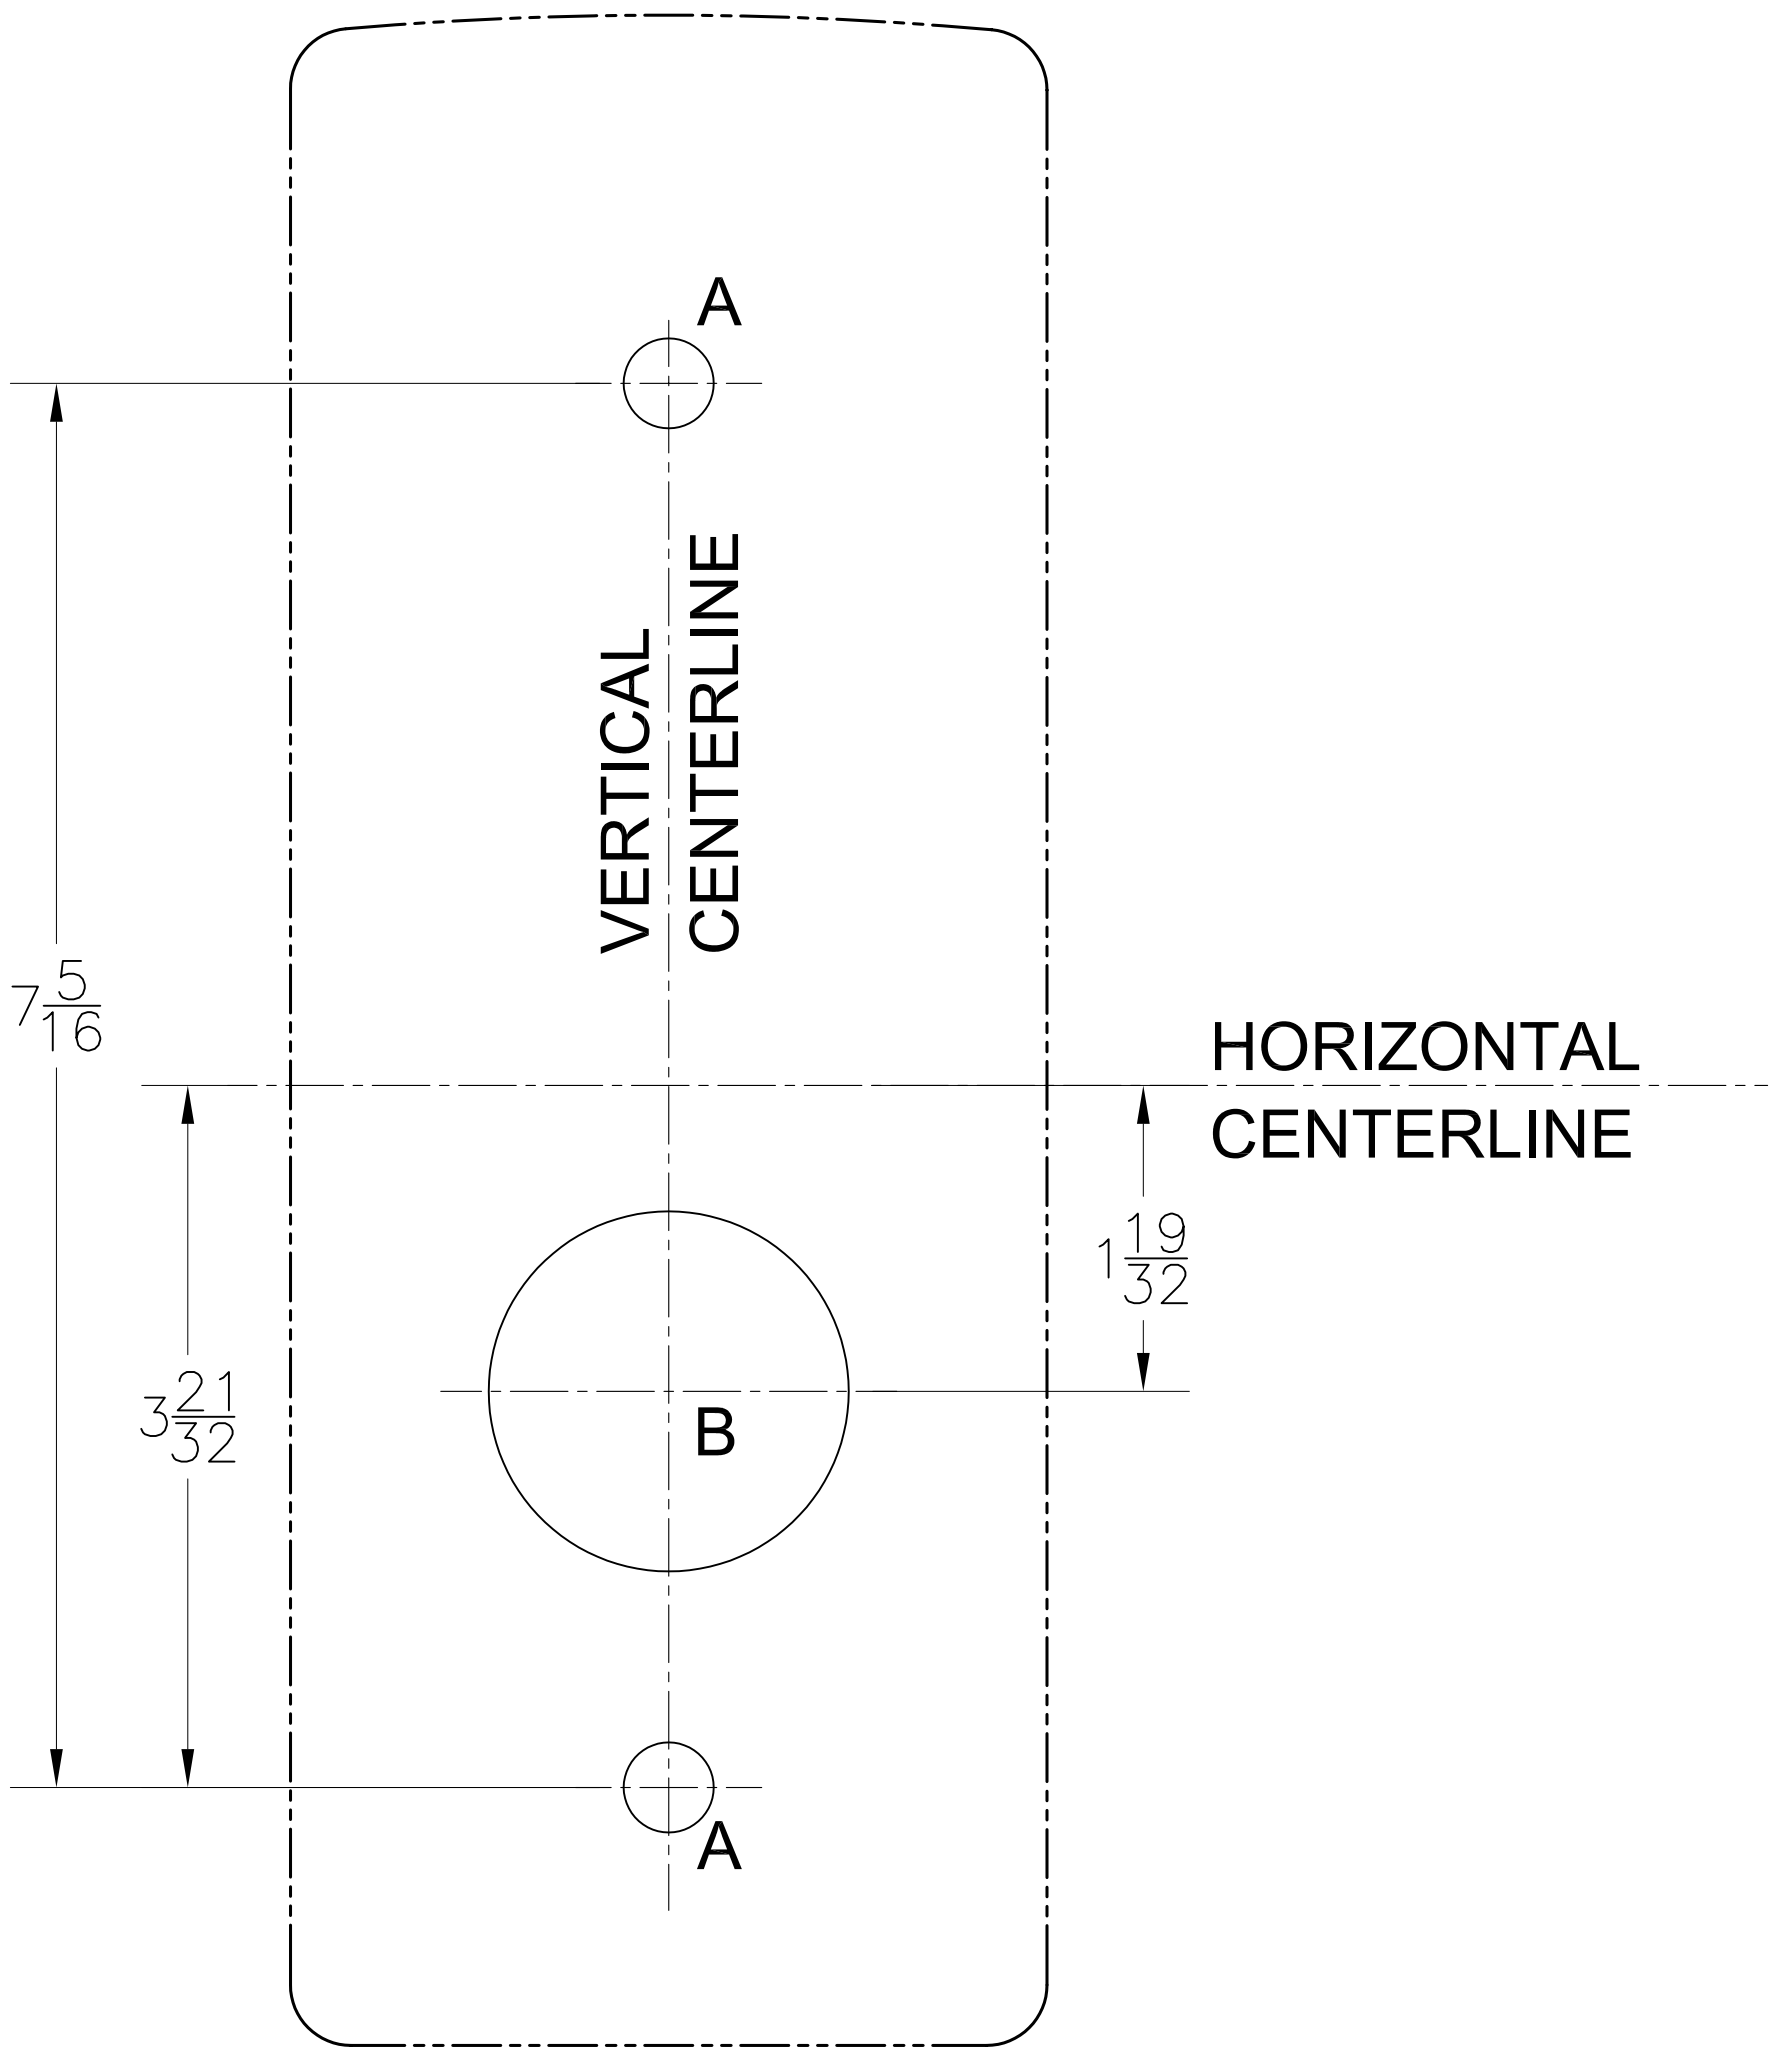

OUTSIDE DOOR PREP