

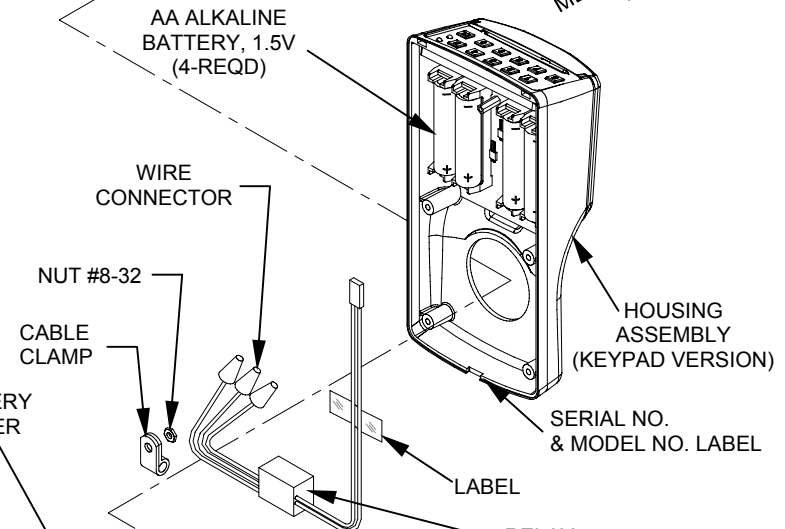
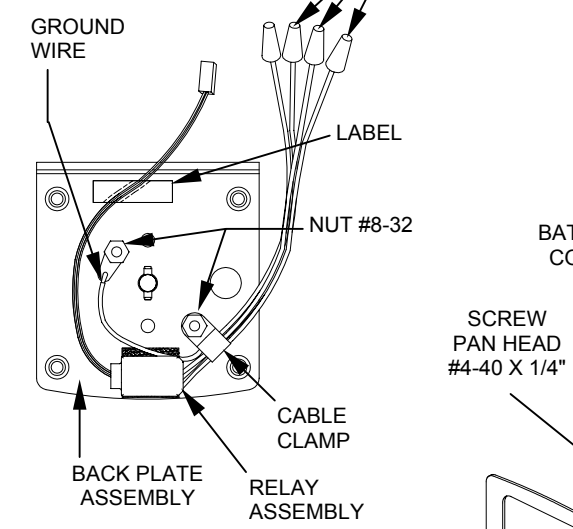
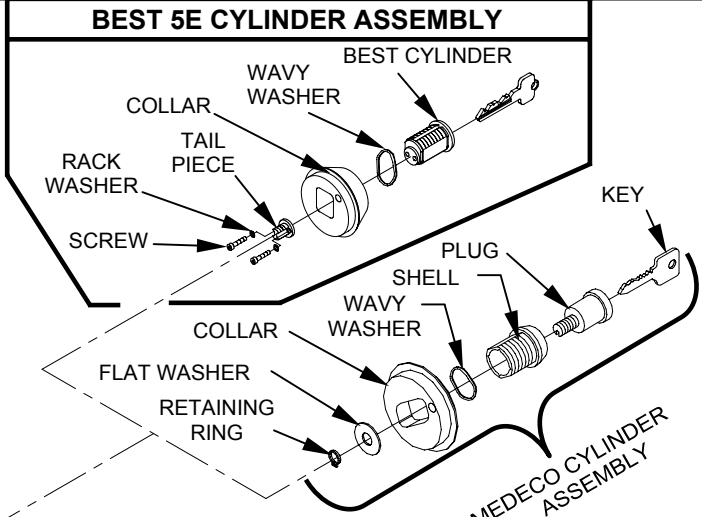
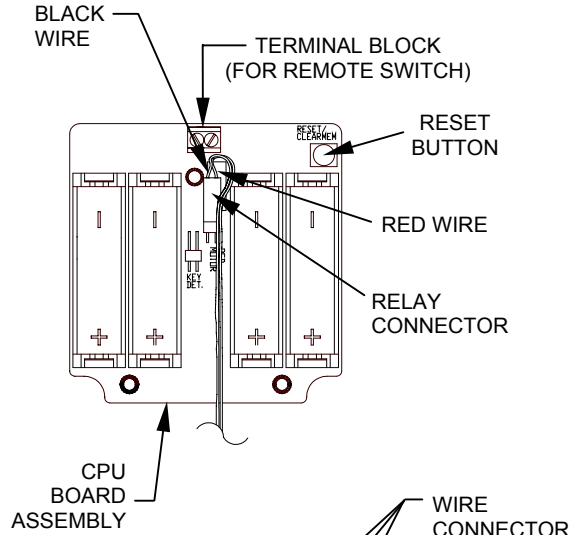


INSTALLATION INSTRUCTIONS FOR OP2000 SERIES NON-WEATHERIZED, WALL MOUNT SYSTEMS (WMS)

WARNING: THIS PRODUCT IS NOT WARRANTED FOR OUTDOORS USE!

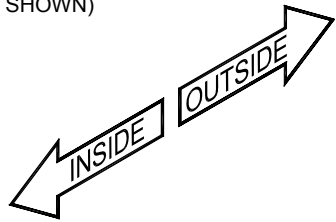

SCREW ANCHOR: 2 LEAD (10-14X1") & 2 HOLLOW-WALL (3/16" S) PROVIDED

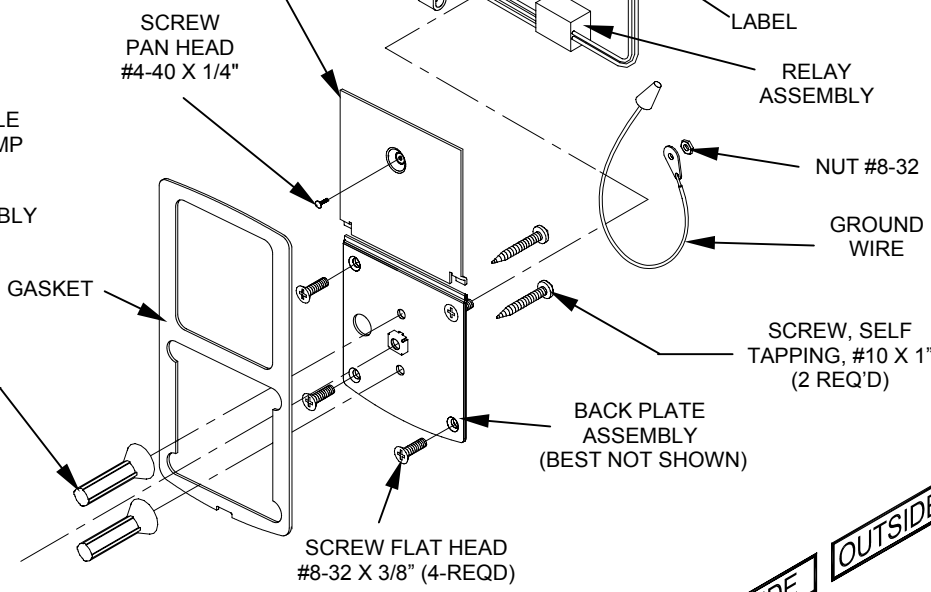

SECTION 1: CHECK OPERATION

- Verify proper operation of the System using the Proximity card. Momentarily place the center of the Proximity Default Programmer ID Card (Included in the OMNILOCK Administrators Kit) over the recess in the front of the OP2000. The OP2000 will flash green once and the Relay will “click” then, during the Open Delay Time, it will flash green five times. The OP2000 will then flash red and the Relay will “click”.
- If your System has a keypad Proceed as follows, otherwise go to Step C: Verify proper operation of the System using the Keypad. Enter the Default Programmer ID, **1 2 3 4**, at the Keypad. The Lights will flash as in the previous step.
- If the System malfunctions remove the Battery Cover and check for proper orientation and seating of the Batteries and Relay Connector. Ensure that the wires are not pinched. Reset the electronics by pressing and holding the Reset Button on the circuit board until the light flashes green, approximately three seconds. The System will go through a self-test and flash green 5 times. Any red flash indicates an electronics or Relay problem. Repeat step a and b if all flashes are green.

SECTION 2: GENERAL INFORMATION

Electrical Installation: Install in accordance with local and national electrical codes.

Static Electricity Protection: Since the Wall Mount System controller controls external circuits, particular care must be taken to ensure that static electrical discharges will not cause difficulties in operation. A typical source of static discharge is a user who accumulates a charge while walking across a rug, then upon reaching for the keyboard, causes a spark to jump from the hand to the keyboard. The basic principle is that all devices connected with the system should be electrically connected to a common ground. This means that the case of the Wall Mount System (green/yellow wire) should be connected to the chassis of the door strike or other device, which it operates. In addition, if possible, one of the device power supply leads should be grounded to the common ground. (Refer to Diagram 1) A number 18 AWG(#10 MWG) or larger copper wire is recommended to connect the components together and to a building ground if available. The equipment grounding conductor (bare wire or green) normally in an electrical outlet box (or a metal box itself) is recommended for grounding.


Remote Operation: The Wall Mount System can be activated through a remote switch (secretary's switch). When properly wired, momentarily pressing the remote switch will cause the System to cycle and the event will be recorded in the Audit Log. (Refer to Section 9.)

CONNECTIONS			
COMMON	NORMALLY OPEN CONTACT (FAIL SECURE)	NORMALLY CLOSED CONTACT (FAIL SAFE)	COMMON
BLACK WIRE	WHITE WIRE	ORANGE WIRE	GREEN/YELLOW WIRE

NOTES: (1): POWER SUPPLY: 24 VOLTS (RMS OR DC) NOMINAL OR LESS.

(2): DOOR DEVICE CURRENT NOT TO EXCEED 5A.

(3): CONNECT ONE OF THE POWER SUPPLY OUTPUT LEADS TO THE EQUIPMENT GROUND IF NOT ALREADY CONNECTED.

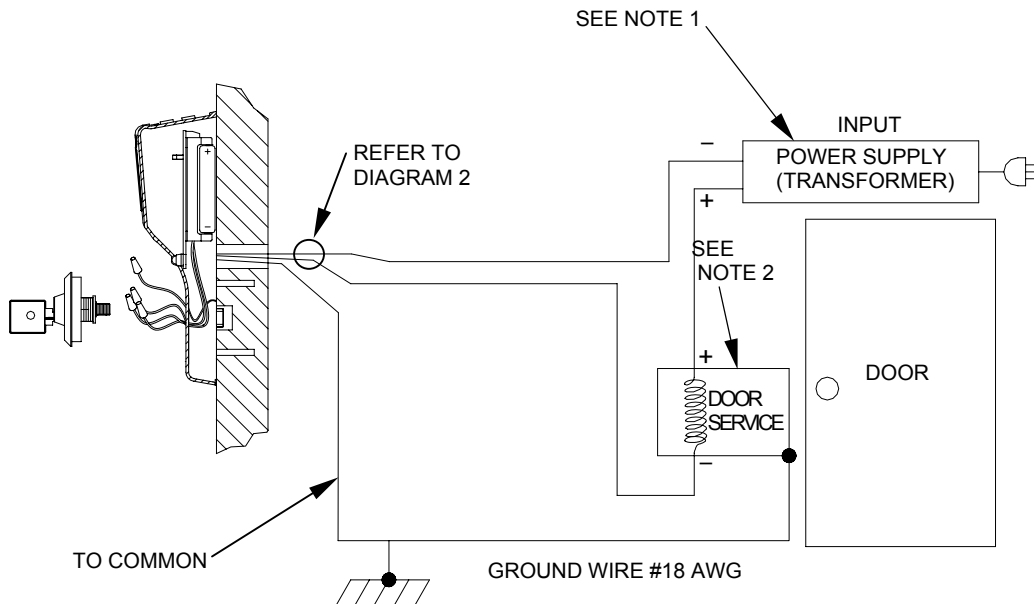


SECTION 3: PREPARE THE WALL

- Determine the location for mounting the Unit. Consider the route for wires between the device to be controlled and the Unit. Also consider wheelchair access.
- Place the Mounting Template in the desired location, ensure that the top edge is horizontal and mark the centers for the four holes.
- Drill the holes as indicated on the Template. Note that the hole size for Mounting Screws depends upon the type of wall material and the type Screw Anchors used. Hollow Wall Anchors and Lead Anchors are provided.
- Install the Screw Anchors if required.


SECTION 4: INSTALL WIRING

- Ensure that the Power Supply for the Device is turned off.
- Route the Power Supply Wire, the Device Wire and the Device Ground Wire to the Wire Access Hole in the Wall. Allow the Wires to extend approximately 4" from the Wall.
- If a Remote Switch is to be installed, route a twisted pair of wires from the switch location to the wire access hole in the wall. (Refer to Section 9.)

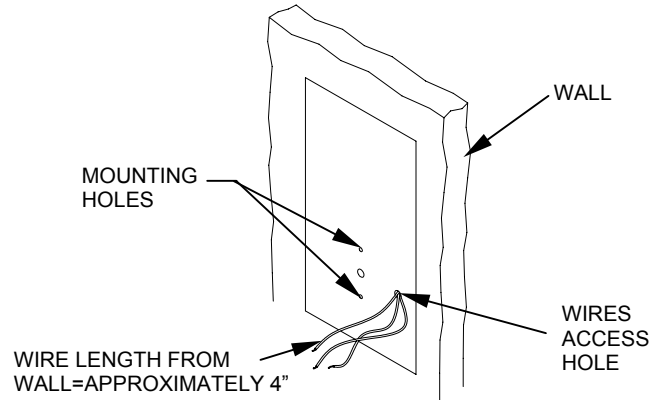

SECTION 5: INSTALL THE WALL MOUNT SYSTEM

- Insert the Key into the Cylinder Assembly and rotate the Key counterclockwise until the Cylinder Assembly can be removed from the unit.
- Guide the ends of the Wires from inside the unit out through the hole.
- If a Remote Switch is being installed, proceed as follows, otherwise go to Section 5d.
 - Remove the Battery Cover.
 - Connect two (2) wires approximately nine (9) inches long to the Remote Switch Terminal Block on the PC Board and route the wires out through the hole in the front of the module.
 - Replace the Battery Cover.
- Guide the Wires from the Wall through the hole in the Back Plate and out through the hole in front of the Unit.
- Place the Unit against the Wall and secure with the Mounting Screws.
- Connect the Wires, using the Screw-On Wire Connectors as shown below for the function desired. Tighten the Connector on the unused Wire.
- If a Remote Switch is being installed connect the wires from the Remote Switch to the wires from the Terminal Block. (Refer to Section 9.)

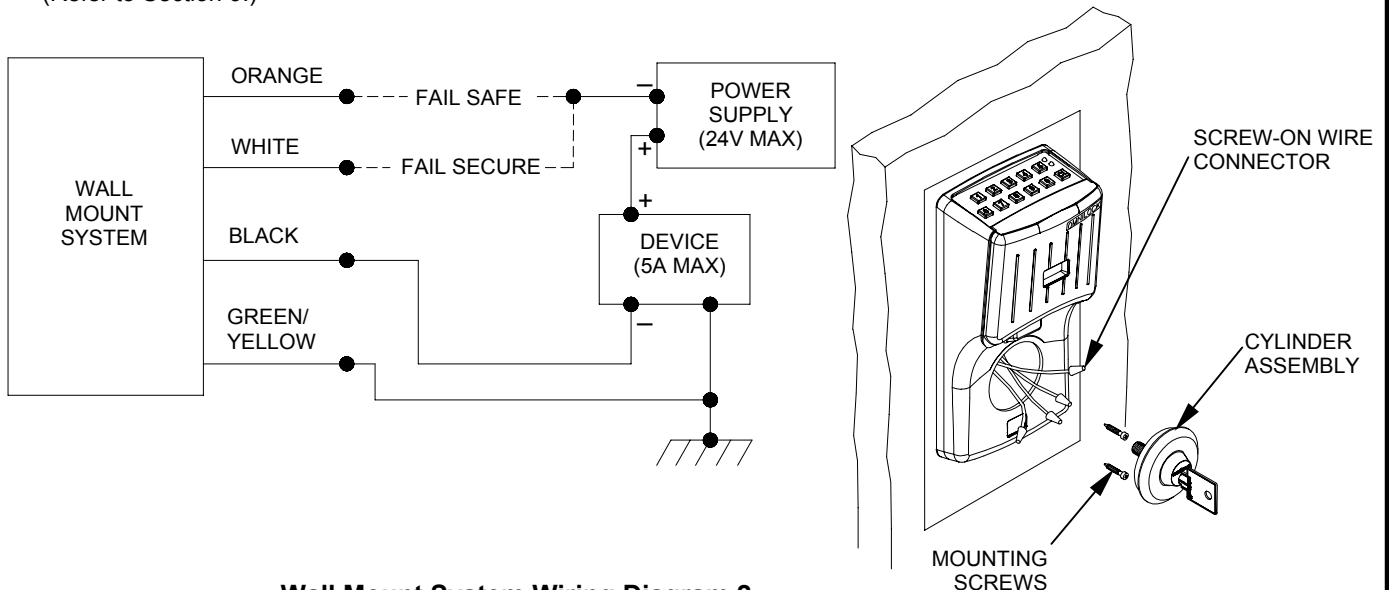

Wall Mount System Wiring Diagram 2

SECTION 6: PRE-TEST THE INSTALLATION

- Turn on the power to the Device and determine if it is in the proper state. If it is not in the proper state, check the Power Supply and Wiring.
- Enter the Default Programmer ID, **1 2 3 4**, at the Keyboard. The green light will flash once (1) and the Device will change state, then, during the open delay, it will flash green five (5) times. After approximately five (5) seconds, the red light will flash and the Device will return to its original state.
- If a Remote Switch has been installed, momentarily press the switch. The green light will flash once (1) and the Device will change state. After approximately five (5) seconds, the red light will flash and the Device will return to its original state.

SECTION 7: COMPLETE THE INSTALLATION

- Place the wires inside the Unit so that they are clear of the hole.
- Insert the Cylinder Assembly into the Unit so that the hole in the Collar engages the Stud in the Back Plate. Rotate the Key Clockwise until the Cylinder Assembly is snug. For the Medeco Cylinder, the Key may be removed in any vertical or Horizontal position. For Best Cylinders the Key may be removed in only one vertical position.
- Enter the Default Programmer ID, **1 2 3 4**, and check for proper operation of the Device.
- If a Remote Switch has been installed, check for proper operation of the Device.
- Record the Key identification number and keep it in a safe place so that duplicate Keys can be ordered if required. For Medeco Cylinders, keys must be ordered through OSI Security Devices.

SECTION 8: PROGRAM THE SYSTEM

IMPORTANT: To avoid unauthorized access, it is important to program a new Programmer ID.


Refer to the OMNILOCK Administrator's Guide for programming instructions.

If the System has been installed before the required programming information is available, the Access level may be set to unlocked as follows:

- Enter the Default Manager ID, **2 2 2 2**, at the Keypad, the green light will flash.
- Press **2**, the green light will flash.
- Press and hold the **CL** key. The green light will flash four times. (The light will flash once when the **CL** key is first pressed, continue to hold the key until the light flashes again, this is the start of a 3 Flash Sequence.)
- The Device will remain in the Unlocked mode.

SECTION 9: REMOTE SWITCH

- Remote operation of the System may be accomplished by a momentary Switch closure. This may be desirable for someone monitoring a protected entrance, such as a receptionist. Momentarily pressing the Switch will cause the System to go through a normal unlock and lock sequence. If the Switch is held closed, the open time will be extended.
- For installation refer to step 4c and section 5.

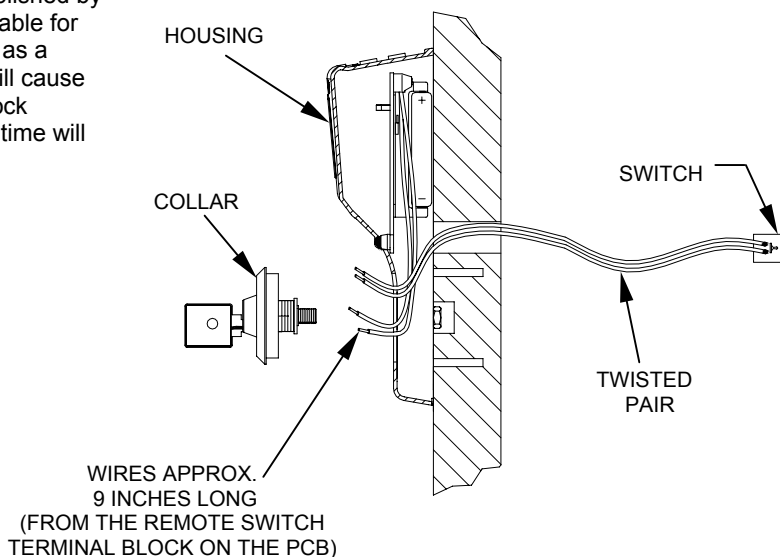

INSTALLER NOTES: Leave these instructions and other documents with the User.

Copyright ©2001 OSI Security Devices Inc. All Rights Reserved.

OMNILOCK is a Registered Trademark of OSI Security Devices Inc. BEST is a trademark of Best Access Systems. Medeco is a Registered Trademark of Medeco High Security Locks, Inc.

11575 Rev A

OSI SECURITY DEVICES

(Website: WWW.OMNILOCK.COM)

PAGE 4 OF 4

1580 JAYKEN WAY
CHULA VISTA, CALIFORNIA. 91911
(619) 628-1000 FAX (619) 628-1001